



选型表

Selection Table

<p>一次系统图</p>					
<p>型号配置 补偿容量以300kVar为例</p>	<p>柜体型号: Ingenis300/400 元件选配: HKT25/400-TP × 2 HKT50/400-TP × 5 Varc30.3/440-3P × 12</p>	<p>柜体型号: Ingenis300/400 元件选配: HKT30/230-SP × 4 HKT25/400-TP × 1 HKT50/400-TP × 3 Varc30.3/440-3P × 7 Varc12.0/250-1P × 12</p>	<p>柜体型号: Senergy300-189/400 元件选配: 接触器控制 FC25-189/400-3P × 2 FC50-189/400-3P × 5</p>	<p>柜体型号: Senergy300-189/400 元件选配: HKT25/400-TP F × 2 HKT50/400-TP F × 5 HL25-189/400 × 2 HL50-189/400 × 5 Hvarc33.4/480-3P × 12</p>	<p>柜体型号: Senergy300-189/400 元件选配: HKT30/230-SP F × 4 HKT25/400-TP F × 1 HKT50/400-TP F × 3 FC10-134/230-1P × 12 FC25-189/400-3P × 1 FC50-189/400-3P × 3</p>
<p>建议: 1000 (柜宽) X1000 (柜深) X2200 (柜高) 柜体最大安装容量 (kVar)</p>	<p>375</p>	<p>345</p>	<p>325</p>	<p>325</p>	<p>285</p>